



## Exhaust Bypass Valve Controller – Addendum

### Using the Controller with Homelink Systems

The Homelink installed in the vehicle must support 433MHz. Some Homelink systems do not support this frequency (e.g., prior to 2014 in North America). The actual programming for the Homelink may vary by vehicle. Refer to your vehicle's owner manual for specific instructions on setting up the system.

In general, to program Homelink, press and hold the Homelink button you wish to program and hold until an indicator light slowly flashes. While the Homelink light is slowly flashing, hold the remote fob within a few inches of the Homelink. Press the transmit button on the fob for 3 to 5 seconds, then release and immediately press again. The sequence of pressing and releasing the fob button will prevent the fob transmitter from timing out before the Homelink can successfully clone the signal. Continue pressing and releasing the fob button until the Homelink indicator lamp goes solid or flashes rapidly. You will need to program one button on the Homelink for each function button on the transmitter fob.

