

Forza Componenti



Aston Martin Vantage Install Tips

Accessing the Fuse Block

The fuse block on the Aston Martin Vantage is located in the trunk (boot).

Caution: Some fuses may be continuously "hot" and not switched with the ignition. Take care to avoid shorting any connections.

Install red wire fuse tap at fuse location #22 with lead wire oriented as shown below.

Install yellow wire fuse tap at any nearby fuse location on same side of fuse block. Recommend using a fuse that is "switched" to the ignition if one is available.

Potential Controller Module Installation

Any location near the fuse block is good for installing the controller module.

